

PREMIER RANGE: "RAPID ASSEMBLE" DOORKIT FOR COOLERS AND FREEZERS

Using The Rayflex Aluminium Flat Bullet System


TOOLS NEEDED

- Pen or Pencil to Mark Drill Holes
- Drill
- Screws
- Step Stool or Ladder
- Utility Knife to Cut Strip

IMPORTANT

Prior to installation, unroll all door strips and place them on a clean, flat surface in a warm atmosphere for a minimum of twenty-four (24) hours. This will allow the strips to return to their original form.

DIAGRAM 1
Side View

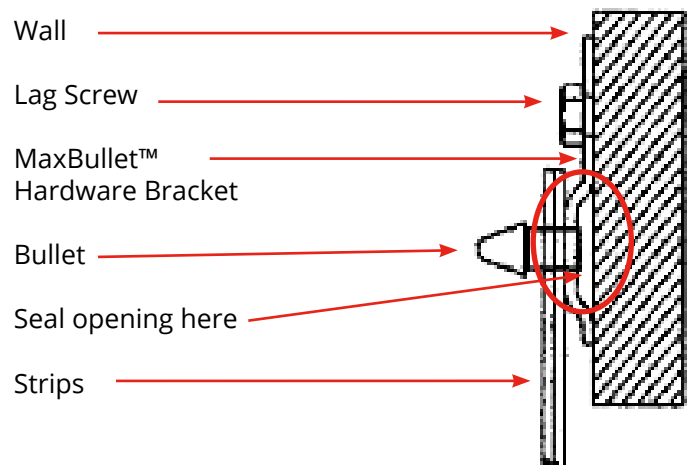

1.
Mount the Bullet hardware bracket using screws on the inside wall of walk-in, centered appropriately above conventional door opening.

2.
Press the door strips onto the "bullets" of the hardware bracket making certain that the concave sides are facing each other (Diagram 3). Attach strip numbers 1 and 3 (see Diagram 2) with concave side toward you, leaving desired spacing between strips as indicated by the diagram on reverse side of this sheet. Then attach strip number 2 with concave side away from you. Proceed with strip number 5 toward you, again leaving the appropriate spacing as per diagram on reverse side of this sheet. Proceed until all strips are in place.

3.
Once all of the door strips have been attached, the strips can be trimmed to leave 6mm of clearance from the floor surface. Your PVC door strips may be trimmed by using a common utility knife to score and then be torn by hand. **The door strips need to hang for 24 to 48 hours before final trim to allow for proper alignment.**

DIAGRAM 2
Front View w/ Strip Spacing

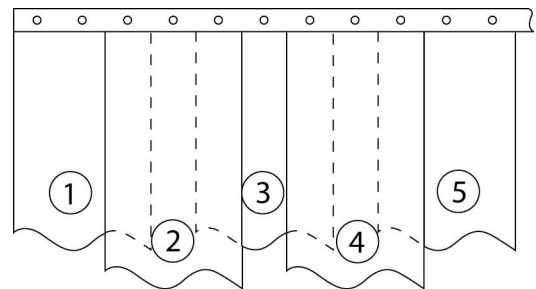


DIAGRAM 3




FOR ANY QUESTIONS OR COMMENTS, PLEASE CONTACT OUR EXPERIENCED TEAM.


STRIP PLACEMENT GUIDE

PARTIAL OVERLAP


150MM WIDE
MATERIAL

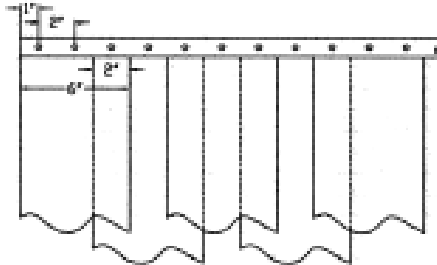


200MM WIDE
MATERIAL

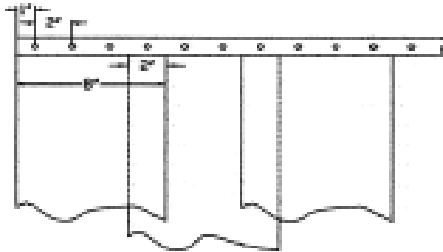

300MM WIDE
MATERIAL

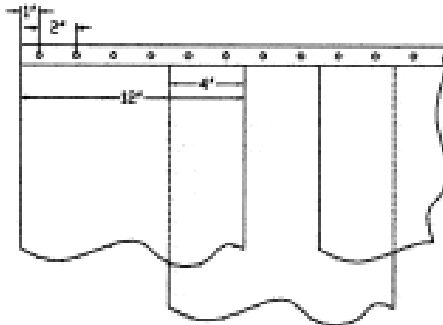

400MM WIDE
MATERIAL

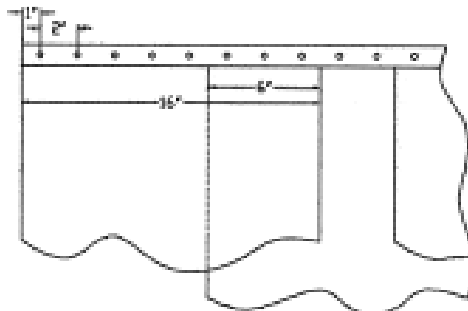

FULL OVERLAP

